



Ceramic Glue Gun DWHTGR50

Glue Gun Instruction Leaflet

CAUTION:

Read Safety Rules and Operating Instructions Carefully

WARNING:

When using electric tools, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and personal injury.

READ ALL SAFETY INSTRUCTIONS:

1. Keep children away.
2. Do not touch the nozzle area or melted glue.
3. Keep work area clean. Work environment should be clean, dry well lit and clear of flammable materials.
4. Guard against electric shock. Prevent body contact with grounded surfaces like pipes and appliances. Do not use near water.
5. Inspect extension cords.
6. Always use safety glasses.
7. Don't abuse cord. Never carry the tool by the cord or yank the cord to disconnect from plug or receptacle.
8. Disconnect tools when not in use.
9. Avoid accidental glue discharge. Do not touch the glue stick or trigger except to dispense glue.
10. To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
11. When not in use, the tool should be stored indoors.
12. Do not pull glue sticks from gun. The feed mechanism may become damaged or impaired. If you desire to change types of glue, cut off protruding end and feed the remainder through with the new type of glue.
13. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

Safety Precautions:

- Do not touch nozzle area of glue gun or melted glue.
- Do not make repairs to the glue gun.
- Do not use a damaged glue gun.
- Do not allow glue gun to come in contact with water, liquids or rain.
- Do not carry the tool by the cord or pull cord to disconnect it from the outlet.
- For interior use only.
- Do not leave the glue gun unattended during use.
- Do not attempt to remove unused glue from the glue gun after use.
- Place the glue gun in the upright position when idle using the fold down stand provided.
- Do not use this product in areas where the risk of explosion is present.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similar qualified persons in order to avoid a hazard.

ELECTRIC RATING:
INPUT: 120 VAC 60Hz
POWER: 50W



WARNING:

WHEN GUN IS HOT, DO NOT LAY IT ON ITS SIDE.
 MELTED GLUE WILL BURN SKIN.
 OPERATING TEMPERATURE OF THE NOZZLE IS 380°F (193°C).
 DO NOT TOUCH THE NOZZLE OR MELTED GLUE.
 THIS TOOL MUST BE PLACED IN ITS STAND WHEN NOT IN USE.

APPLICATIONS AND REPAIRS

- Sealing windows, tiles & bathroom fixtures
- Repair bookbindings, shoe or loose carpeting
- Dried floral arrangement
- Electrical insulation
- Cardboard
- Woodworking
- Plastics
- Foam
- Fabrics
- Crevices
- Paper

OPERATING INSTRUCTIONS

IMPORTANT: Please read carefully before using your electric glue gun

1. Plug your glue gun into an electrical outlet.
2. To open the fold-away stand, take hold of the flanges on both sides of the stand and pull forward, until the stand locks into position.
3. Insert standard (1/2" inch or 12mm diameter) glue stick. Two glue sticks are needed for first time use.
4. Wait 2 minutes for the glue and glue gun to heat up initially.
5. Glue is fed by simply pulling the trigger. Amount of glue is determined by how far the trigger is pulled.
6. Unplug tool after use if it will not be used within a 30 minute period.
7. Do not attempt to remove unused adhesive from the gun after use. Any unused adhesive can be stored in the gun, reheated and used later.

TIPS ON USING

1. The working time of the hot melts can be extended to 50 to 60 seconds by applying the adhesive in large drops (1/2" diameter) or shortened to less than 10 seconds by extruding the adhesive in thin lines.
2. Large areas are difficult to bond because the adhesive frequently will harden before you have extruded the required amount.
3. Preheat surfaces (especially metals) to improve bond strength. Direct sunlight will accomplish this.
4. The adhesive remaining in an unheated glue gun will remelt upon heating.
5. Do not use items that will be subjected to temperatures above 140° F (60° C).
6. Do not use hot melt to hold heavy loads.
7. Some paints and stains can weaken the adhesive. You may need to paint or stain before gluing.

Available Stanley® Glue Sticks for this Glue Gun

Part No	Applications
GS15DT	Dual Melt: for bonding heat sensitive material, as well as general
GS20DT	
GS25DT	
GS230S	All Purpose: Clear sticks for fast repairs and hobby projects.
GS230-24	
GS230-3	
GS220-BK	All Purpose Transparent: Sticking on wood, leather
GS220-24	
GS240-24	Electrical: for sticking on cables, electric leads, PVC, carpet floor covering
GS260	Wood Working: transparent Hot Melt glue
GS264BK	
GS500	Super Strength: for stronger bond in a wide variety of materials



79002772

© 2013 DEWALT Industrial Tool Co.,
 701 East Joppa Road, Baltimore, MD 21286
 1-800-4-DEWALT (1-800-433-9258)