




AN **ORIGINAL** GRANITE BRACKET™ PRODUCT


THE ORIGINAL FLOATING SHOWER BENCH KIT




1. Install both brackets at the desired height using the provided hardware. Ensure they are level and securely attached.

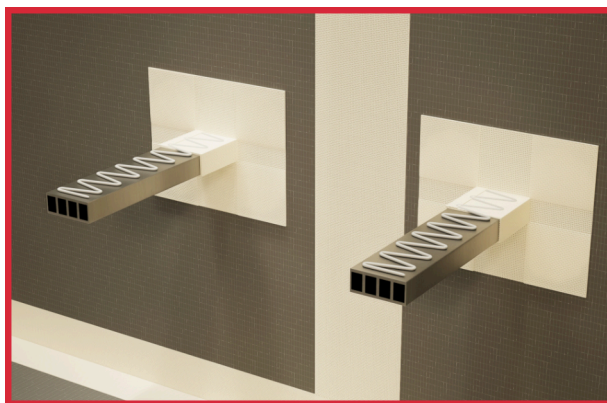


2. Install preferred backer board to manufacturer specifications. Then apply adhesive to both brackets.

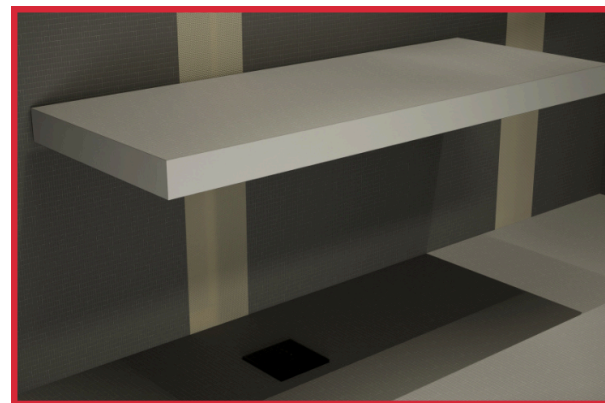


3. Trace and cut out notches on your first board to fit onto the brackets.

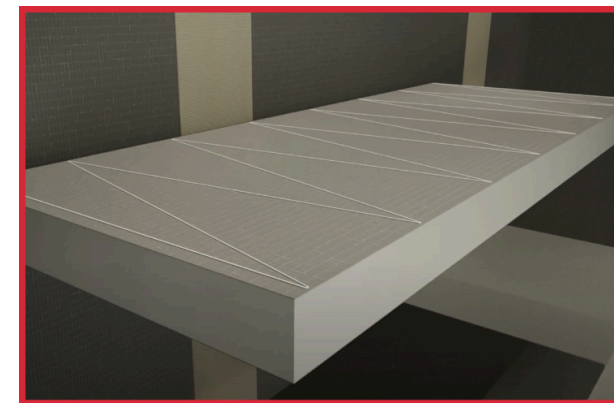

4. Apply adhesive to the top of the first board.

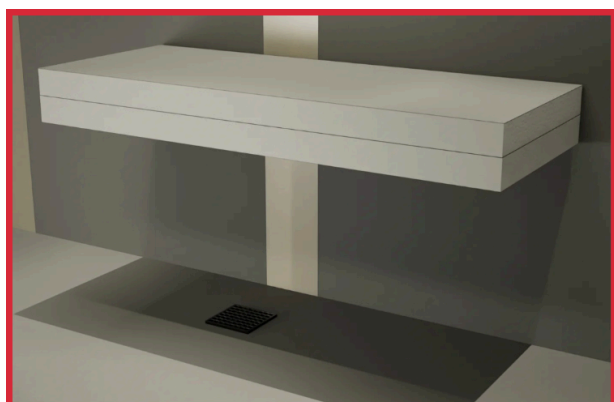

5. Place the second board on top of the first board with the adhesive in between both boards.

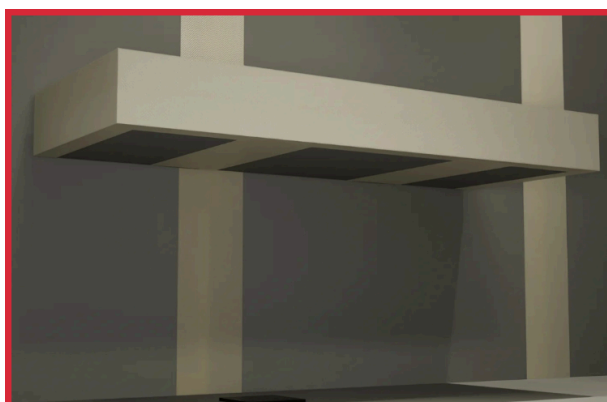

6. Apply a layer of thin-set then wrap the exposed sides in the provided tape.



7. Install your preferred tiling and enjoy!



**SCAN HERE FOR MORE
SHOWER BENCH KITS**



**SCAN FOR A
HOW TO INSTALL
VIDEO GUIDE**

ORIGINALGRANITEBRACKET.COM | 888-584-1112

***BENCH CAN BE CUT
DOWN TO CUSTOMIZED
SPECIFICATIONS.**